

PRINTER DRIVER GUIDE

(For Macintosh® CP-D70DW series)

Macintosh, Apple, and Mac OS are trademarks of Apple Inc.
Adobe, Adobe Photoshop are registered trademarks of Adobe Systems.
The various software packages mentioned in this manual are the registered trademarks of their respective companies.

Refer to the following web site to check the latest version of the printer driver.
http://www.MitsubishiElectric.co.jp/vcp/support/driver_en.html

CP-D70DW series printer : CP-D70DW, CP-D707DW

You can not use different version of the driver at the same time.
When the driver has already installed, uninstall it and then install this driver.

System requirements

Computer	: PowerMacintosh G4, G5, PowerBookG4, iMac, Mac mini, MacBook, MacBook Pro, Mac Pro
Main storage memory	: 512 Mbytes or more
Hard disk	: Empty capacity 512 Mbytes or more
Operating system	: 10.5.8, 10.6.4, 10.7.4 ^{*2}
USB ^{*1} cable	: Be sure to use a cable 2m or shorter.

* Use the printer driver in an environment that your operating system works properly.

*1:CP-D70DW series printer supports USB 2.0 (Hi-Speed USB) interface. As USB 2.0 is fully upward-compatible with USB 1.1, CP-D70DW series printer can be used with a personal computer that supports USB 1.1 interface.

To use CP-D70DW series printer based on USB 2.0 (Hi-Speed USB), connect with a personal computer that supports USB 2.0 (Hi-Speed USB). For USB 2.0 (Hi-Speed USB) compatibility of your personal computer, contact the manufacturer of the personal computer.

*2:This printer driver supports UniversalBinary.


This printer driver is operable either on Intel-based MacOSX or PowerPC-based MacOSX.

Installation

Administrator authority is required to install this printer driver.


When the printer driver of older version has been installed, uninstall it before installing this driver.

- 1) Start your Macintosh.
- 2) Double-click on “CP70MacOSX10.5.pkg” of the folder. (Fig. 1)

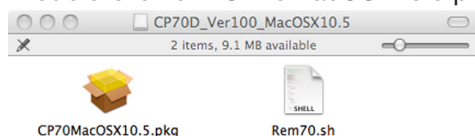


<Fig. 1>

- 3) Click “Continue” button in the “Install MITSUBISHI CP70D Series.” (Fig. 2)
- 4) Read the Software License Agreement and click “Continue” button. (Fig. 3)

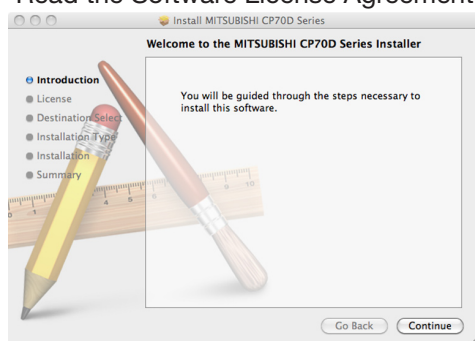


<Fig. 2>

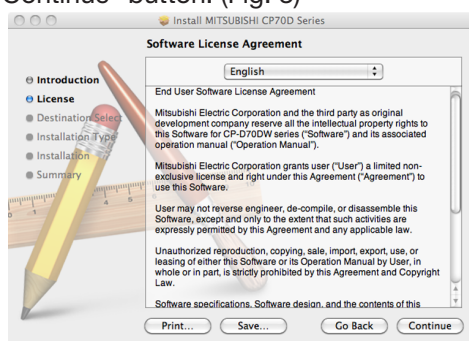


<Fig. 3>

- 5) When you agree with the terms and conditions of the Agreement, click “Agree.” (Fig. 4)
- 6) Click “Install” button. (Fig. 5)

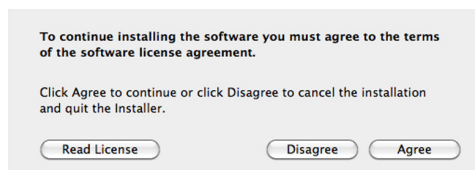


<Fig. 4>

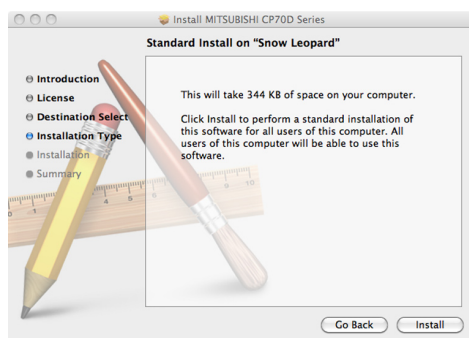


<Fig. 5>

- 7) Enter a name and password, and click “OK” button. (Fig. 6)

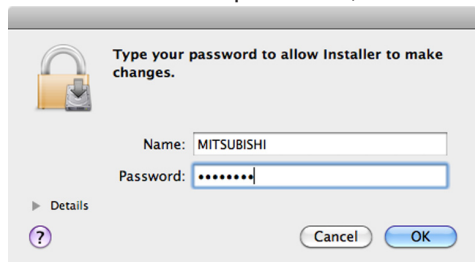


<Fig. 6>

- 8) Click "Continue Installation." (Fig. 7)
- 9) Click "Restart" to restart the personal computer. (Fig. 8)

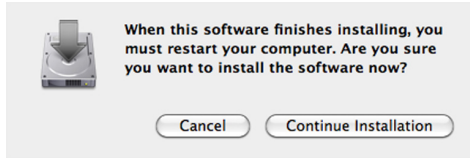

<Fig. 7>

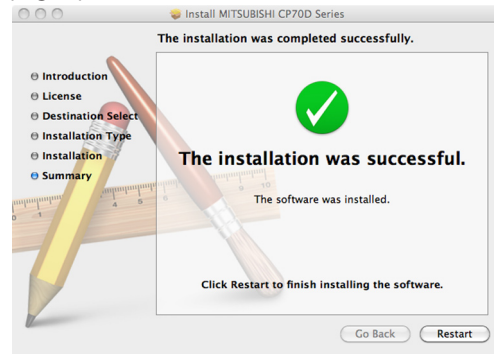

<Fig. 8>


- 10) Turn on the printer and connect it with the personal computer.
- 11) Click "System Preferences" to display "System Preferences" screen. (Fig. 9)
- 12) Click "Print & Fax" on "System Preferences screen."

The installed printer is automatically added to the "Printers." (Fig. 10)

*This printer is added in the name of "MITSUBISHI CP60D70D707D."



<Fig.9>

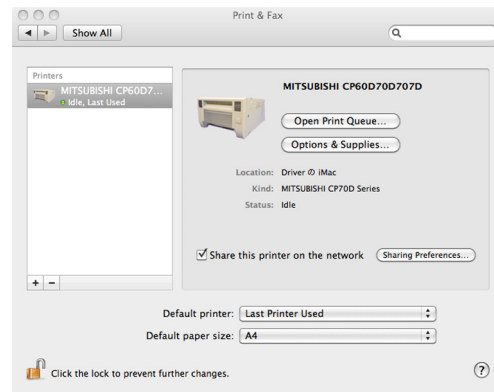

<Fig.10>


Uninstallation

Operate the following procedures to uninstall the printer driver.

- 1) Start "Terminal" of "Utility" in the "Applications" folder.
- 2) When you do not have administrator authority, obtain it by "su" command.
- 3) Go to the directory where the uninstallation script (Rem70.sh) is stored and execute the script.
./Rem70.sh
- 4) When a password is required, enter the password for the administrator.
- 5) When uninstallation is completed successfully, the following message is displayed.
Uninstallation was completed.
Is a computer rebooted?" (Y/N):
- 6) Enter "Y" or "y" to reboot the computer.
If the computer is not rebooted automatically, exit the ongoing applications and reboot the computer manually.

Function explanation

1. Page Setup dialog

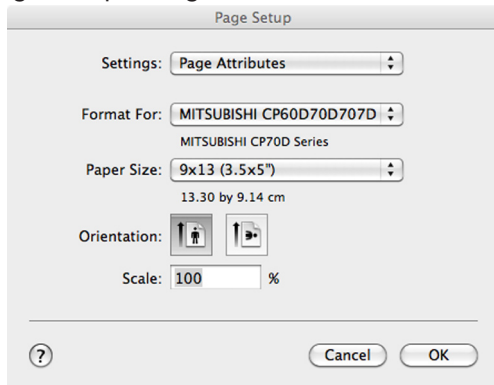

<Fig. 11 Page Setup dialog>

1) Paper Size

The size of paper is selected.

The number of print pixels for each paper size is shown in the table.

Paper size		Print dots
9x13 (3.5x5")		1076×1568
10x15 (4x6")	10x15 (4x6")	1228×1864
	10x15x2 Type2 (4x6"x2) ^{*1}	
	10x15x2 Type3 (4x6"x2) ^{*1}	
	5x15x2 Type1 (2x6"x2) ^{*2}	
13x18 (5x7")		1568×2128
15x15 (6x6")		1820×1864
15x20 (6x8")		1864×2422
15x21 (6x8.5")		1864×2564
15x23 (6x9")	15x23 (6x9")	1864×2730
	10x15x2 Type1 (4x6"x2) ^{*1}	
5x15x2 Type2 (2x6"x2) ^{*2}		614×1864

*1: Use CK-D768 or CK-D769 for the PAPER/INK RIBBON SET.

*2: Use CK-D746 for the PAPER/INK RIBBON SET.

For the print, see "Operating directions for customer's purpose."

2) Orientation

The direction of paper is set.

This is the standard setting function of the operation system.


3) Scale

Enlargement scale is set. (Range : 25-400%)

This is the standard setting function of the operation system.

2. Print dialog

The following settings can be configured when "Feature Sets" of "Printer Features" is set to "Options" in the Print dialog.

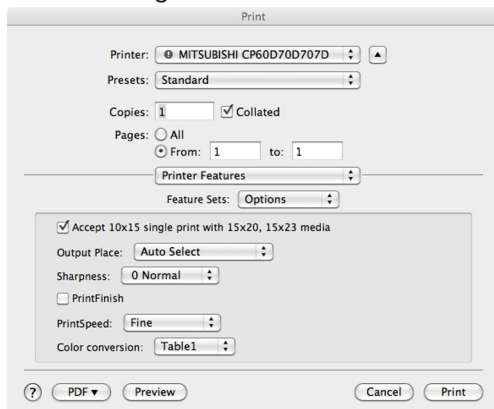

<Fig.12 Print dialog>

- 1) Accept 10x15 single print with 15x20,15x23 media
 "Accept 10x15 single print with 15x20,15x23 media" is set.
 When the setting is off, 10x15 (4x6") single print cannot be performed with 15x20 (6x8") and 15x23 (6x9") media.
- 2) Output Place
 *The output place can be set only when you use CP-D707DW.
 Auto Select: The printer to be used is selected automatically.
 The Upper Printer: The upper printer is used for printing.
 The Lower Printer: The lower printer is used for printing.
- 3) Sharpness
 none / -3 / -2 / -1 / 0 / 1 / 2 / 3
 Level of outline correction is changed.
 none :Not perform the outline correction.
 -3 to 3 :The value is smaller, the outline becomes softer.
 The value is larger, the outline becomes sharper.
- 4) PrintFinish
 Printing is finished in matte.
- 5) PrintSpeed
 Printing speed is set.
 Fine : Printing is performed at the standard speed. (Standard quality picture)
 SuperFine: Printing is performed at the speed slower than the standard speed. (High quality picture)
 UltraFine : Printing is performed at the speed slower than the SuperFine speed. (Ultra high quality picture)
 * When matte is selected, the Fine speed cannot be set.
- 6) Color conversion
 none / Table1
 none :Color conversion is not performed.
 Table1 :Color conversion is performed.


When "Feature Sets" of "Printer Features" is set to "Gamma", "Brightness", or "Contrast", the menu display changes and the following settings become configurable.

7) Gamma

Adjusted value R, G, and B (-5 - +5)

Use this function to adjust the density of the middle tones.

When you want to increase the density of the middle tones, decrease the value of "Gamma".

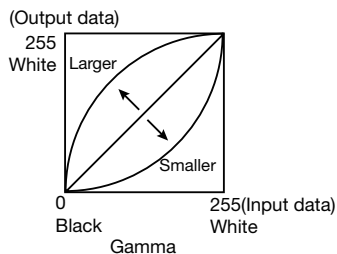


8) Brightness

Adjusted value R, G, and B (-64-+64)

Use this function to adjust the brightness of the print picture.

When you want to make the print picture darker, decrease the value of "Brightness".

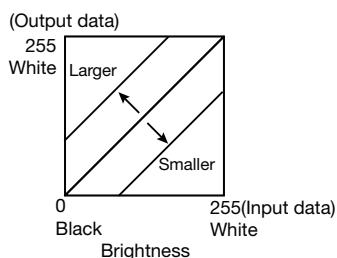


9) Contrast

Adjusted value R, G, and B (-64-+64)

Use this function to adjust the contrast of the print picture.

When you want to make the contrast of the print picture stronger, increase the value of "Contrast".

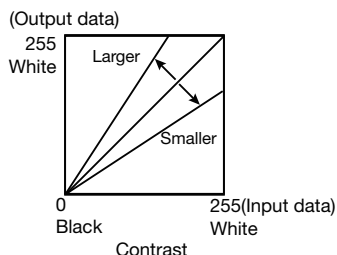

3. Error indication

No.	Error dialog message	Operation
1	Printer is not connected.	When the error is resolved, printing restarts.
2	The printer does not respond. Turn the printer Off and then On again, and try again.	<p>The print job operations of the Print Queue screen are equipped as standard in the operating system. The buttons as follows are displayed.</p> <p>Delete Job: Deletes the job being selected in the Print Queue.</p> <p>Hold Job: Holds the job being selected in the Print Queue.</p> <p>Resume Job: Resumes printing of the held job being selected in the Print Queue.</p>
3	Something is wrong with the printer. Turn the printer Off and then On again, and try again.	
4	Mechanical Error. Set paper again.	
5	Mechanical Error. Turn the printer Off and then On again, and try again.	
6	Printing unit is opened.	
7	Printing unit is opened while printing.	
8	Ink ribbon and paper type do not match.	
9	Ink ribbon is not correctly installed.	
10	Ink ribbon end.	
11	Paper empty.	
12	The ink ribbon is not standard.	
13	The printer was turned off while printing. Turn on a printer.	
14	Paper jam. Set paper again.	
15	Paper size of printer driver and ink ribbon type do not match.	
16	Ink ribbon empty. Exchange ink ribbons.	
17	Paper end.	
18	It is not equipped with the paper strip bin.	
19	Ink ribbon error. Set paper again.	
20	Ink ribbon error. Set paper and ink ribbon again.	

* The error dialog messages are displayed in the Print Queue screen of "MITSUBISHI CP60D70D707D" which is displayed by clicking the "Open Print Queue" button in "Print & Fax."

* When no error message is displayed on the monitor and printing is not carried out, check the indicators on the front of the printer.

* For the details of the indicators on the printer, see the operation manual of CP-D70DW series printer.

- 1) Secure of Hard disk for spool file
Secure the capacity of Hard disk for spool file enough for the printer operation and the number of printing sheets.
The printing cannot be correctly carried out when the capacity is running short.
The drive for spool file is the same drive as the system drive usually.
- 2) Operation of the printer
Refer to the operation manual of the printer.
Do not turn off the power switch during data transfer or print.
If you turn off the power switch, restarting of a computer may be needed.
When deletion of a printing data cannot be performed, restarting of a computer is required.
- 3) About connection of a computer and a printer
Do not disconnect the interface cable during data transfer.
If the interface cable is disconnected, wait 1 minute or more after disconnecting the cable to connect it again. If the cable is connected without leaving an enough interval, the printer driver may not work correctly.
- 4) System requirements for USB interface
Use a personal computer that are USB-guaranteed by the manufacturer.
CP-D70DW series printer supports USB 2.0 (Hi-Speed USB) interface. As USB 2.0 is fully upward-compatible with USB 1.1, CP-D70DW series printer can be used with a personal computer that supports USB 1.1 interface.
To use CP-D70DW series printer based on USB 2.0 (Hi-Speed USB), connect with a personal computer that supports USB 2.0 (Hi-Speed USB). For USB 2.0 (Hi-Speed USB) compatibility of your personal computer, contact the manufacturer of the personal computer.
- 5) Connection of USB cable
When you take out and insert a USB cable after installation of a printer driver, wait 10 seconds or more after extracting a cable.
If the cable is reinserted without leaving an interval, the printer may not operate normally.
- 6) Print job
Do not delete the print job in the spooler during data transfer. When deleting it, do not start printing until the printer becomes to the initial status.
- 7) Number of prints
With some applications, the number of prints set by the printer driver does not work. Set the number of prints from the print dialog box of the application.
- 8) Errors during printing
When an error occurs during printing, it may not be displayed on the monitor. Check the indicator on the front of the printer and take the countermeasure, and then start printing procedure again. For the indication by the indicator of the printer and the countermeasure, see the operation manual of the printer.
- 9) When "Resume Job" is selected after "Hold Job" is performed in the Print Queue screen, an error may not be displayed even if it occurs. In this case, select "Hold Job" and resolve the error, then click "Resume Job" to resume printing.
- 10) "Add" of the "Printer List"
In some version of MacOSX, you may not print images with the printer registered by the "Add" button. Make the computer recognize the printer by the procedure described in "Installation."
- 11) When the printer is turned off or a USB cable is not connected to the printer, the printer status may be displayed as standby. However, it does not affect the further printing operations.
- 12) In MacOSX 10.6, when an error job is deleted without resolving the error, the error indication in the Print Queue may not be cancelled even if the error is resolved. In this case, delete the printer from the printer list, and then add it again to cancel the error indication.

- 13)When the 5x15x2 (2x6") (Type1 or Type2) is selected for the paper size
The 5x15x2 (2x6") (Type1 or Type2) size can be selected only on printers with the appropriate firmware installed. On the printer without appropriate firmware, the 5x15 (2x6") print is not performed and printing is carried out in 10x15 (4x6") size. The paper cut position may shift depending on the printer.
- 14)When you pause or resume the printing or delete the job in the Print Queue while the printer driver is communicating with the printer such as during the printer error, the communication may fail and the deleted job may be printed.
- 15)When the 10x15x2 Type2, 10x15x2 Type3 or 5x15x2 Type2 is selected for the paper size
When the number of printed pictures (pages) or that of copies is set to an odd number, a blank page may be printed in case of 10x15x2 Type2 and 5x15x2 Type2 and the last 1 page may be printed in case of 10x15x2 Type3, if you delete or pause the job in the Print Queue during the printer error.
- 16)When you use CP-D707DW on Mac OS X 10.7, if there is a job with error on one printer and the data to be printed is sent to the other printer having no error, the print may not be started on the printer having no error even after the job with error is deleted in the Print Queue.
In such a case, resolve the error or connect the USB cable again.
- 17) When "Matte" is selected in "Print finish"
The Matte finish is only available on printers with the appropriate firmware.
Printers without appropriate firmware will ignore the Matte setting.
- 18)When "UltraFine" is selected in "Print Speed"
The UltraFine is only available on printers with the appropriate firmware.
Printers without appropriate firmware will ignore the UltraFine setting.
In addition, when UltraFine is selected on printers having no appropriate firmware, printing cannot be performed with the appropriate picture quality.
- 19)When the 10x15x2 (4x6") (Type2 or Type3) is selected for the paper size
When multiple images are selected in "Preview", etc., the images are printed in 10x15 (4x6") size.
When the number of pages or copies is odd, the last print of 10x15 (4x6") size paper is output as a blank in the case of the 10x15x2(4x6") (Type2) and the last print of 10x15 (4x6") size paper is not output as a blank in the case of the 10x15x2(4x6") (Type3).
The 10x15x2(4x6") (Type3) is only available on printers with the appropriate firmware.
Printers without appropriate firmware will show an error of size mismatch (See 3.Error indication No.15), at the last print of 10x15 (4x6") size paper, if 10x15x2(4x6") (Type3) is selected.
- 20)When the 15x21 is selected for the paper size
The 15x21 is only available on printers with the appropriate firmware.
Printers without appropriate firmware will show an error of size mismatch (See 3.Error indication No.15), if 15x21 is selected.
- 21)When "Accept 10x15 single print with 15x20,15x23 media" is set
When "Accept 10x15 single print with 15x20,15x23 media" is set to off and 10x15x2 (4x6") (Type3) is selected for the paper size, the paper size error occurs (3.Error indication No.15) at the last print of 10x15 (4x6") size paper.
Please use 10x15x2 (4x6") (Type2) to avoid the occurrence of such error.
- 22)When the 15x15 is selected for the paper size
The 15x15 is only available on printers with the appropriate firmware.
Printers without appropriate firmware will show an error of size mismatch (See 3.Error indication No.15), if 15x15 is selected.
- 23)About setting of "Accept 10x15(4x6") single print with 15x20(6x8"),15x23(6x9") media" at the time of connection with more than one printer
When multiple CP-D70DW series printers are connected to one personal computer, the setting of "Accept 10x15(4x6") single print with 15x20(6x8"), 15x23(6x9") media" does not cope with use of the different setting with each printer at the same time.
When you use the setting of "Accept 10x15(4x6") single print with 15x20(6x8"), 15x23(6x9") media" by the setting that is different in the connected printer each, confirm that printing is not carried out with other printers and carry out printing.

24) When the size mismatch error occurs in MacOSX 10.7 (See 3. Error indication No.15) and the failed job is deleted in the Print Queue without resolving the error, the printing may not be started even when the next print job is sent.

In this case, connect the USB cable again. The error indication is canceled in the Print Queue.

If you keep the USB cable connected, printing is started after a while.

Operating directions for customer's purpose

1. When you want to adjust the color of the print image.

Set the following settings in "Feature Sets" of "Printer Features" in the Print dialog.

(Note that the effects are invalid on the display even if you make following setting.)

1) When you want the density of entire print picture to be thick (dark), decrease the value of "Brightness".

2) When the print picture is out of focus (the contrast is weak), increase the value of "Contrast".

The contrast becomes stronger.

3) When you want to change the color of printout.

Change the value of "Brightness".


Increase Red : Increase the "R" value.

Increase Green : Increase the "G" value.

Increase Blue : Increase the "B" value.

2. When "10x15x2 Type 1" is selected in "Paper size"

Lay out the image 1 and image 2 as following and print them.

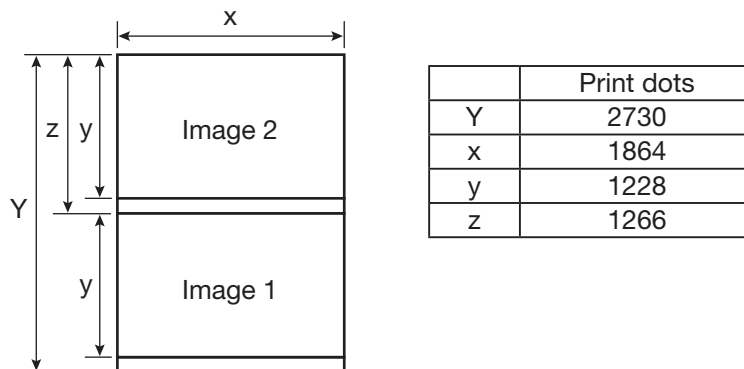


3. When "10x15x2 Type 2" is selected in "Paper size"

When multiple images are selected in "Preview", etc., the images are printed in 10x15 (4x6") size.

When the number of pages or copies is odd, the last print of 10x15 (4x6") size paper is output as a blank page. Depending on the application software, a blank page may be set every other page.

4. When "5x15x2 Type 1" is selected in "Paper size"

Lay out the image 1 and image 2 as following and print them.

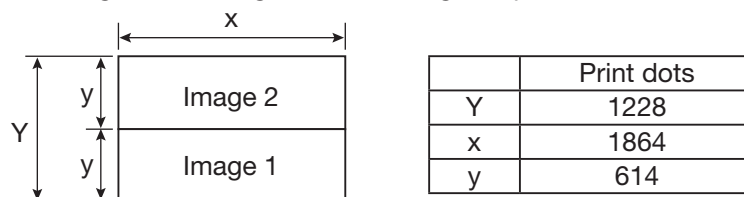

5. When "5x15x2 Type 2" is selected in "Paper size"

When multiple images are selected in "Preview", etc., the images are printed in 5x15 (2x6") size.

When the number of pages or copies is odd, the last print of 5x15 (2x6") size paper is output as a blank page. Depending on the application software, a blank page may be set every other page.



Prohibition matter



We prohibit Reverse Engineering, decompiling or reverse assembling of this driver software.



Exemption from responsibility



Occasionally, this software does not operate normally depending on operating environment.
Moreover, Mitsubishi Electric Co. will not assume any responsibility for damage (including, but not limited to, lost profit or damage caused from special circumstances etc.) occurring during the use of this driver.